

Instructions

Desk Storage Units for Tablets



The DeskCabby desktop charging unit is designed to charge up to 16 compatible USB devices. Follow the steps below for the initial setup of your DeskCabby.

To **UNLOCK** the front door, use the key provided and turn the cam lock anticlockwise on the front door (fig 1). When fully opened the door will slide into the side of the unit (fig 2).

To **UNLOCK** the rear door, use the same keys and turn the cam lock clockwise (fig 3). When the doors are locked, it is advised to remove the keys.



Fig. 1



Fig. 2



Fig. 3

Installing Tablets

With the front door open place the tablets between the metal wire dividers in the front of the unit with the device power inlet to the front. Insert the factory supplied USB cable into the device and thread the cable through the cable channel in the top of the unit (Fig. 4) through to the back.

Insert the USB-C end of the cable into the USB hub (Fig. 5), access through the rear door. Bundle and store any excess cable into the cable channel.

The DeskCabby mains lead is already connected to the USB hub, plug the cable into the wall socket and switch on, then switch on the USB hub, the switch is located on the underside of the hub (Fig. 6).

The tablets can be charged with the front door open or closed.





Status of the Devices

When power is switched on the LED lights at the front of the unit (Fig. 7) will all light up red initially, then any corresponding hub socket that is in use will show red if not fully charged, when fully charged the LED light will turn green.

Cleaning

In the front device compartment the silicone mat (Fig. 8) can be removed to give access to wipe down the metal internals, use a damp cloth, do not allow moisture to get into the USB hub or LED lights.

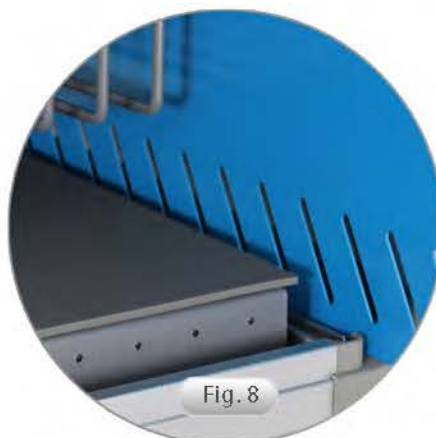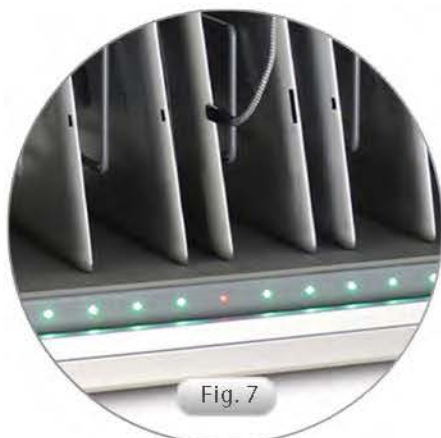

DeskCabby

General Safety Precautions

There are no serviceable parts inside the DeskCabby. The casings enclose high voltage electrical and electronic components, under no circumstances should the casing be removed, only trained personnel are allowed access to the inside of the unit.

Under no circumstances should the air vents on the DeskCabby be covered.

The DeskCabby unit is designed for re-charging purposes only. This unit is specifically designed for the use of tablets requiring up to 30W charging using their factory supplied USB-C cables, using the hub for recharging or powering any other equipment will invalidate the warranty.

To avoid risk of electric shock or fire the unit should only be used by a competent adult.

This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

The mains power lead must not be pulled when the DeskCabby is under power as this could damage critical components. When transporting the DeskCabby the mains power lead can be stored within the rear of the unit.

Inspect the plug and power lead daily, if the plug and power lead is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid a hazard.

The DeskCabby range should be used in a dry environment and at normal room temperatures. No water or moisture must be allowed in the unit. The DeskCabby must not be charged outdoors.

Always disconnect the DeskCabby from the wall outlet before altering the USB cable configuration or moving the unit.

Before any cleaning of the DeskCabby the IEC mains lead must be removed from the mains wall socket. If the devices are connected to their factory supplied cables they must also be removed. Cleaning of the GoCabby should only be done with a dry cloth, no liquid detergents or aerosol cleaners are to be used as these could damage internal components.

Correct disposal of this product:



This marking indicates that this product should not be disposed with other household wastes throughout Australia, Europe and the US. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

Technical Data Sheet

Nature of supply: ~

Rated mains supply voltage: **UK: 220-240V**
AUS: 230V
EURO: 230V

Rated frequency: **UK: 50Hz**
AUS: 50Hz
EURO: 50Hz

Type of power connection:

UK: Detachable mains power lead with UK 3 pin plug and C13 Connector

Aus: Detachable mains power lead with Australia 3 pin plug and C13 Connector (AS/NZS 3112:2004)

Euro: Detachable mains power lead with Schuko type plug and C13 Connector

USB-C Hub

Input: 110VAC/220VAC

Frequency: 50Hz/60Hz

Input Current: 12A/115VAC, 7.5A/230VAC

USB-C output (PD2.0/PD3.0/BC1.2/QC2.0/QC3.0/AFC/FCP)

PD output power: Max 30W (5V/3A/9V/3A/12V2.5A)

Total power: 600W(max)

Cooling fan with automatically work is 35°C

Operating Temperature:

We recommend an operating temperature of 0°C - 35°C (32°F-95°F)



DANGER!
RISK OF ELECTRIC SHOCK
DANGER! ELECTRICAL CORDS
CAN BE HAZARDOUS
MISUSE CAN RESULT IN FIRE
OR DEATH BY ELECTRIC SHOCK



UK
CA

C **E**

