

Instructions

Laptop Charging & Storage Units

Featuring a unique Power Management system
to reduce our environmental impact



LapCabby Vertical Series - 10V / 16VC / 20V / 32V / 36V

To Lock and Unlock the front doors – turn the key on the top of the unit and then rotate the camlock wing control 90° anticlockwise (Fig. 1). For double doors, to lock ensure the left door is closed first and then the right, rotate the camlock wing control 90° clockwise and turn the key. Back doors must be closed prior to locking the front doors.

To Lock and Unlock the back doors – locate the hidden handle at the front of the unit on the underside of the top (Fig. 2) and pull towards you. To lock again close the right door first and then the left door.

To install laptops into LapCabby:

1. Pull the shelf out and place the laptops between the wire bars on the protective rubber mats.
2. Place power adapters in holders located in the separate back compartment as (Fig. 3). For best results the adapter cable should be neatly organised and secured with a suitable tie strap/rubber band and kept fully inside the adapter holders.
3. Then pass the power adapter cables through the cable port holes on the back panel (Fig. 4) and push into the grey clips to secure.
4. You can then plug the power cables into the laptops and adjust the length of the cables so the shelves can be pulled out.
5. If using the supplied cable clips (Fig. 5), you can secure the laptop cables to the metal bars.
6. Plug each main plugs from adapters into power extension strips.
7. Finally plug the provided LapCabby mains lead into the IEC socket located on the side panel and then into your mains to power up the unit.



Note: 2 castors have lockable wheels. Please lock when LapCabby is in position by pushing down on the castor foot plate.

LapCabby Horizontal Compact Series - 16HC / 32HC

To Lock and Unlock the front doors – turn the key on the top of the unit and then rotate the camlock wing control 90° anticlockwise (fig 1). For double doors, to lock ensure the left door is closed first and then the right, rotate the camlock wing control 90° clockwise and turn the key. Back doors must be closed prior to locking the front doors.

To Lock and Unlock the back doors – locate the hidden handle at the front of the unit on the underside of the top (Fig. 2) and pull towards you. To lock again close the right door first and then the left door.

To install laptops into LapCabby:

1. Place laptops on the horizontal shelf.
2. Place power adapters in holders located in the separate back compartment (fig 3). For best results the adapter cable should be neatly organised and secured with a suitable tie strap/rubber band and kept fully inside the adapter holders.
3. Then pass the power adapter cables through the cable port holes on the back panel (Fig. 4) and push into the grey clips to secure.
4. If using the supplied cable management clips (fig 5) insert them into the holes in the plastic tray, they can be on the right or the left depending on your laptop charging point.
5. Plug power cables into laptop.
6. Plug mains plugs from adapters into power extension strips.
7. Finally plug the provided LapCabby mains lead into the IEC socket located on the side panel and then into your mains to power up the unit.



Note: 2 castors have lockable wheels. Please lock when LapCabby is in position by pushing down on the castor foot plate.

LapCabby Mini Series - 20V / 32V

To Lock and Unlock the front doors – turn the key on the top of the unit and then rotate the camlock wing control 90° anticlockwise (Fig. 1). For double doors, to lock ensure the left door is closed first and then the right, rotate the camlock wing control 90° clockwise and turn the key. Back doors must be closed prior to locking the front doors.

To Lock and Unlock the back doors – locate the hidden handle at the front of the unit on the underside of the top (Fig. 2) and pull towards you. To lock again close the right door first and then the left door.

To install devices into LapCabby Mini:

1. Place your devices in the coloured storage boxes, two devices per box or one laptop up to 17 inches.
2. Place power adapters in holders located in the separate back compartment as (Fig. 3). For best results the adapter cable should be neatly organised and secured with a suitable tie strap/rubber band and kept fully inside the adapter holders.
3. Then pass the power adapter cables through the cable port holes on the back panel (Fig. 4) and push into the grey clips to secure.
4. Plug power cables into laptops and adjust cable length so drawer can be opened.
5. Clip cables into the moulded clips on the laptop storage boxes to secure (Fig. 5).
6. Plug each main plugs from adapters into power extension strips.
7. Finally plug the provided LapCabby mains lead into the IEC socket located on the side panel and then into your mains to power up the unit.



LAPM20V



LAPM32V



Note: 2 castors have lockable wheels. Please lock when LapCabby is in position by pushing down on the castor foot plate.

LapCabby Vertical USB C Series - 16VCUSBC / 32VUSBC

To Lock and Unlock the front doors – turn the key on the top of the unit and then rotate the camlock wing control 90° anticlockwise (fig 1). For double doors, to lock ensure the left door is closed first and then the right, rotate the camlock wing control 90° clockwise and turn the key. Back doors must be closed prior to locking the front doors.

To Lock and Unlock the back doors – locate the hidden handle at the front of the unit on the underside of the top (Fig. 2) and pull towards you. To lock again close the right door first and then the left door.

To install laptops into LapCabby:

1. Place laptops on the horizontal shelf.
2. Connect the devices USB cables to the USB hub (Fig. 3).
3. Then pass the power adapter cables through the cable port holes on the back panel (Fig. 4) and push into the grey clips to secure.
4. You can then plug the USB cables into the laptops and adjust the length of the cables so the shelves can be pulled out.
5. If using the supplied cable clips (fig 5), you can secure the laptop cables to the metal bars.
6. Plug the provided LapCabby mains lead into the IEC socket located on the side panel and then into your mains to power up the unit.
7. For the LAP32VUSBC there is an on/off switch on both hubs (fig 6). On all hubs the LED lights will show red when charging and will go green when the device is fully charged (fig 7).



Note: 2 castors have lockable wheels. Please lock when LapCabby is in position by pushing down on the castor foot plate.

General Safety Precautions

The LapCabby should be situated close to a power socket that is easily accessible. Cabling between the wall and the unit could be a trip hazard.

The LapCabby should never be used on an inclined surface. Never have more than two drawers or shelves in the open or loading position at any time.

Always ensure that all the doors are fully closed and locked and that the mains power lead is disconnected before moving the LapCabby. Forcing the doors beyond 90 degrees will cause damage to the hinges.

The unit is designed for storage and charging purposes only. This unit is specifically designed for use with laptops and their factory supplied AC adaptors or USB cables, use for recharging or powering any other equipment will invalidate the warranty.

The brakes on the front two castors should be locked to prevent movement and the doors locked, and the key removed whenever the unit is parked, unattended or charging. Always disconnect the LapCabby mains power lead from the wall outlet before opening the doors or altering the AC adaptor configuration. When the LapCabby is unplugged from the mains wall socket outlet you should ensure the outlet is switched off if possible.

To avoid risk of electric shock or fire the unit should only be used by a competent adult. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

The mains power lead must not be pulled when the LapCabby is under power as this could damage critical components. When moving the LapCabby the mains power lead must be disconnected from the IEC connection socket. Inspect the plug and power lead daily, if the plug and power lead is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid a hazard.

The LapCabby is intended for indoor use only on carpet, wood or tiled surfaces. Movement across bitumen, tarmac, concrete and rough surfaces should be avoided and doing so will void the warranty claims for damage to the wheels. When moving your LapCabby between floors it is strongly recommended that the unit is transported via a lift or ramp. Do not wheel the LapCabby up or down stairs as this will cause damage to the unit.

The LapCabby should be used in a dry environment and at normal room temperatures. No water or moisture must be allowed into the unit. The LapCabby must not be used outdoors. The LapCabby should not be transported outside unless the weather is warm and dry, if this is unavoidable the unit must be allowed to stand in normal room conditions for at least four hours before it is connected to any laptops or wall sockets.

Before any cleaning of the LapCabby it should be switched off and the IEC mains lead must be removed from the mains wall socket. Cleaning of the unit should only be done with a dry cloth; no liquid detergents or aerosol cleaners are to be used as these could damage internal components.

Technical Data Sheet

Nature of supply:

Rated mains supply voltage: **UK: 220 - 240V**
Aus: 230V
Euro: 230V

Rated frequency: **UK: 50Hz**

Aus: 50Hz

Euro: 50Hz

Max. current: **Our power strips are rated to 13A.**

Total cumulative Watts requirement of devices in each unit should not exceed 2880W.

Type of power connection:

UK: Detachable mains power lead with UK 3 pin plug and C19 Connector

Aus: Detachable mains power lead with Australian 3 pin plug and C13 Connector (AS/NZS 3112:2004)

Euro: Detachable mains power lead with Schuko type plug and C13 Connector

For the LAP16VCUSB & LAP32VUSBC

Input: 100-240V~, 50/60Hz, 12A

USB-C output (PD3.0/QC4+)

DC 5V/9V/12V/15V3A/20V5A max

Total power: 1000W(max)

Operating Temperature:

We recommend an operating temperature of 5°C - 33°C (41°F-91°F). This unit will automatically switch off at 35°C and will switch back on at 29°C, this is to protect the laptop battery.

Cooling condition: Natural convection through vents.

Correct disposal of this product:



This marking indicates that this product should not be disposed with other household wastes throughout the EU, US and Australia. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

EQUIPMENT MUST BE SUPPLIED FROM EARTHED / GROUNDED SUPPLY

High Touch current can result from the summation of the touch currents of each of the devices plugged into the unit.

To protect against a hazard the connection to protective earth should be reliable.

The equipment supply connection (mains plug, mains cable and inlet) must be annually inspected / checked for signs defects or excessive wear and replaced where necessary.



DANGER!
RISK OF ELECTRIC SHOCK
DANGER! ELECTRICAL CORDS
CAN BE HAZARDOUS
MISUSE CAN RESULT IN FIRE
OR DEATH BY ELECTRIC SHOCK

